

# HARDKORR

## USER MANUAL



## 12V AIR FRYER WITH 3L BASKET

HKC12VAF-3L

V1.0 - 10.2024

## IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY



### CAUTION: HOT SURFACES

Appliance generates heat during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property. This appliance is hot during operation and retains heat for some time after turning OFF.

#### • CAUTION: KEEP OUT OF REACH OF CHILDREN

- This appliance should not be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or have been instructed on how to use the appliance by a person responsible for their safety.
- Do not alter or disassemble this appliance under any circumstances. Incorrect handling or reassembly may result in a risk of electric shock or fire and may void the unit warranty.
- Do not touch hot surfaces. Use handles or knobs.
- Keep in a well ventilated space.
- To protect against electric shock do not immerse cord, plugs, or appliance in water or other liquid.
- Unplug when not in use and before cleaning. Allow to cool before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Bring it to a qualified technician for examination, repair or electrical or mechanical adjustment.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for anything other than its intended use.
- Always make sure the frying basket drawer is fully closed while the air fryer is in operation.
- Do not place anything on top of the appliance while it is operating or while it is hot.
- Do not leave this appliance unattended during use.
- Place the appliance on a flat, heat-resistant work area.
- Do not obstruct the air outlet or air inlets on the back and sides of the air fryer, with any objects.
- Avoid contact with escaping steam from the air outlet during air frying.
- Keep appliance at least 10 centimetres away from walls or other objects during operation.
- After air frying, make sure to place the frying basket drawer on a flat, heat-resistant surface before pressing the basket release button.
- Under- or over-filling the frying basket may damage the air fryer and could result in serious personal injury.
- Never move a hot appliance or an appliance containing hot food. Allow to cool before moving.

# PRODUCT OVERVIEW



1 Timer control dial

2 Frying basket drawer with tray insert

# SPECIFICATIONS

SPECIFICATIONS	HKC12VAF-3L
VOLTAGE	12V DC
WATTAGE	250-280W
DRAW	22Ah (26A max. discharge)
CAPACITY	3L - 160mm x 160mm x 95mm
MAX. TEMPERATURE	180°C
TIMER	0-60 minutes
PRODUCT SIZE	280mm x 225mm x 270mm
PRODUCT WEIGHT	2.2kg
CONSTRUCTION	Polypropylene, nylon-66, steel, non-stick coating
CONNECTION	50mm Anderson-style connector
CABLE LENGTH	600mm
CABLE GAUGE	10AWG / 6mm <sup>2</sup>
FUSE SIZE	40A
PROTECTIONS	Short circuit protection Thermal control overheating protection

## RECOMMENDED COOKING TIMES (1-2 SERVES)

Cooking times may vary with size and amount. Cooking times will be longer than suggested on label.

SAUSAGE ROLLS	30 mins (frozen) / 15 mins (defrosted)
MEAT PIES	35 mins (frozen) / 25 mins (defrosted)
POTATO CHIPS	60 mins (frozen) / 40 mins (defrosted)
CHICKEN NUGGETS/TENDERS	20 mins (frozen) / 12 mins (defrosted)
SPINACH & RICOTTA ROLL	35 mins (frozen) / 25 mins (defrosted)

# OPERATION

1. Ensure the air-fryer basket is thoroughly cleaned before each use.
1. Connect the air fryer to a suitable 12V power-source with the Anderson-style connector.
2. Ensure the fryer is placed on a heat-resistant surface, with a 100mm air gap around all sides.
3. Preheat the air fryer for 10 minutes, leaving the basket drawer inside the fryer for best results.
4. When the timer ends, remove basket drawer and place the drawer onto a trivet or heat-proof stand.
5. Fill the basket with desired food. Do not over-fill the basket. It is recommended to make small portions at a time for better cooking results.
6. Place basket drawer back into the fryer and set the timer for the recommended time.
7. Once cooked through, remove basket drawer and place the drawer onto a trivet or heat-proof stand again.
8. Use tongs to remove food from the basket drawer, to reduce risk of burns from coming into contact with the unit.
9. To clean the basket drawer, wait until it has cooled down, remove the tray insert and use a damp paper towel to wipe the surfaces down thoroughly.



## DISCLAIMER

While caution has been taken to ensure the accuracy of the contents of this guide, Hardkorr assumes no responsibility for errors or omissions. Please note that specifications and product functionality may change without notice.

For assistance with assembly or installation, parts and service, please visit [www.hardkorr.com](http://www.hardkorr.com) or contact customer service through the following:



Toll Free:

**1800 533 544**

Monday - Friday

**9AM - 4PM (AEST)**



Language spoken: English

**support@hardkorr.com**

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Hardkorr warrants that this product will be free from defects in material and workmanship for two years. The warranty commences on the date of purchase by the original purchaser, and is not transferable. To access the benefits of this warranty, you must retain your proof of purchase and follow any other direction we reasonably give you (e.g. completing and returning your warranty card if applicable).

## TO BEGIN A WARRANTY CLAIM:

If you believe your Hardkorr product is defective, it must be returned to Hardkorr for inspection by our warranty claims department.

1. You must have a Return Authorisation (RA) number. To get your RA number, please complete the form found on our website and wait for the warranty team to contact you.
2. Once you have an RA number, you must arrange for the product must be shipped at your own expense back to Hardkorr (keep your receipt). The address for shipment will be provided when we issue your RA number.
3. Please be sure that your RA number is clearly marked on the outside of the packaging used for shipping.

Completing the steps as mentioned will ensure a faster process of your claim, so that Hardkorr can get your product back to you as soon as possible.

Once we receive your returned product, our technicians will inspect it. We will then notify you of the outcome of your claim.

If we accept your warranty claim, we will either repair, replace or refund the goods at our discretion. We will also reimburse you for the shipping costs you incurred in sending the goods back to us. Any products that we choose to replace or refund become the property of Hardkorr.

If we do not accept your claim, we will advise you of the reason and hold your product for collection. You will need to arrange and pay for the product to be shipped back to you. If your product is not collected within 30 days of your warranty claim being finalised, we may destroy it.

Your warranty is voided if we (at our sole discretion) determine that there is evidence of one or more of the following:

**Negligence:** Improper installation, improper or extreme use, use that contravenes this instruction manual, etc.

**Abuse:** Road hazards, Damage beyond the limits of "normal wear and tear."

**Unauthorised Repair:** Repair service performed by an unauthorised service centre.

**Disassembly:** Any attempt to open, tamper with or otherwise compromise the integrity of the product.

**Consequential damage:** Damage to this product caused by the failure of another component of the vehicle or device in which this product is installed.

Note regarding exterior finishes: Hardkorr uses the highest quality materials available, but depending on location, environment and exposure, the colour of exterior surfaces can fade. We will not approve any warranty claims that relate to fade.

## DISCONTINUED ITEMS

Discontinued items that are still under warranty will be reviewed by Hardkorr. If a discontinued item is covered under warranty it may be replaced by an equivalent or superior item. If an equivalent item is not available Hardkorr will determine terms of resolution on a case-by-case basis.

LIFE  
WITHOUT  
LIMITS

**HARDKORR™**

   @HARDKORRAU

[WWW.HARDKORR.COM](http://WWW.HARDKORR.COM)