


DUAL BZR-X WIRING HARNESS DIAGRAM

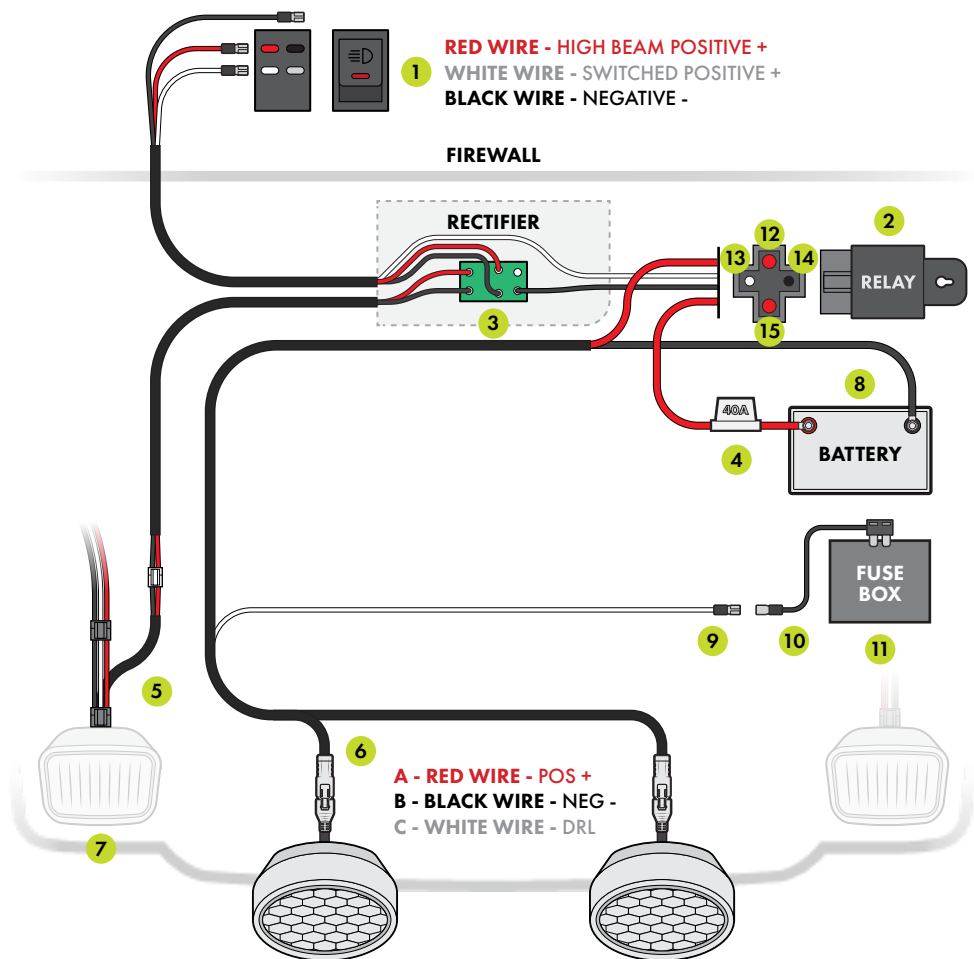

#	ITEM
1	Power switch and pin-out
2	12V/24V Relay (See 12-15 for pinout)
3	Rectifier (Found within wrapped section)
4	40A inline blade fuse
5	Piggyback adapter (H4 adapter shown)
6	Dual 3-pin plugs
7	Vehicle headlights
8	Vehicle battery
9	DRL connection wire
10	Blade fuse adapter (not included)
11	Vehicle fuse box
12	Relay pin 87
13	Relay pin 86
14	Relay pin 85
15	Relay pin 30